



Model: [GM-FTDI-LED](#) USB to RS-232
Commercial Interface Converter
Instruction Manual

Contents

1. Summary	3
2. Functions	3
3. Hardware Installation and Application	3
4. Performance Parameters	3
5. Connector and Signal	4
6. Communication Connection Chart	4
7. Problems and Troubleshooting	5

Summary

With rapid development of computer industry, USB is taking the place of various kinds of traditional low speed peripheral interfaces. However, RS-232 interface designs are still used in many of the important facilities under current industrial environment; therefore, converter is used by many users to implement the data transmission from USB of a computer to RS-232 equipments.

[GM-FTDI-LED](#) is a universal USB/RS-232 interface converter. No external power supply needed. Compatible with USB and RS-232 standards, GM-FTDI-LED is capable to perform the conversion from single-ended USB signal into UART signal of RS-232. DB9 male connectors are used for connection from RS-232 interface. The unique I/O circuit of the internal zero delay auto transceiver contained in the converter controls the data stream direction automatically. The converter is plug-and-play. All these features ensure a universal application on all the existing communication software and hardware interfaces.



USB 2.0 RS-232 Serial Adapter with LED Indicators – <http://www.gearmo.com/>

The data communication rate can be as high as 300-921.6Kbps by the point-to-point communication by [GM-FTDI-LED](#) interface. Power indicator light and data traffic indicator light are also available with the converter for malfunction indication. Conversion from [USB to RS-232](#) is supported.

Functions

GM-FTDI-LED interface converter supports the following communication mode:

- 1) Point-to-point communication mode.

Hardware Installation and Application



Read the user manual carefully before installing the GM-FTDI-LED interface converter. Put the signal cable of the equipment into the USB socket. USB/DB9 male connectors are adopted for input/output interface connection for this product.


Performance Parameters

1. Standards: Conforming to USB V1.1, 1.0 and 2.0 and EIA RS-232.
2. USB signals: VCC, DATA+, DATA-, GND, FG
3. RS-232 signals: DCD, RXD, TXD, DTR, GND, DSR, RTS, CTS, RI
4. Working mode: Asynchronous point-to-point mode.
5. Direction control: Adoption of automatic data stream control for automatic recognition and control of data transmission direction.
6. Baud rate: 300-921.6Kbps, automatically detection of the transmission rate of the serial interface signal.
7. Transmission Distance: 5 Meters for RS-232 and less than 5 Meters for USB.
8. Interface Protection: +-15KV electrostatic protection.
9. Interface Forms: B interface female connector and DB9 male connector for USB.
10. Signal Indication: 9 indicator lights for Power (PWR), Send (TXD), and Receive (RXD).
11. Transmission media: twisted-pair cable or shielded cable.
12. Dimensions: 1555mm x 36mm x 16mm
13. Working environment: -40°C to 85°C, relative humidity of 5% to 95%
14. Supports Win98, 2000, 2003, 2008, XP, Vista, 7, 8, CE, Mac, Linux.
15. Both BUS and external power supply are supported.


Connector and Signals

1) Pin assignment of RS-232C

DB9M (PIN)	RS-232C
1	Protective Earth
2	Receive Data SIN (RXD)
3	Transmit Data SOUT (TXD)
4	Data Terminal Ready DTR
5	Signal Ground GND
6	Data Set Ready DSR
7	Request to Send RTS
8	Clear to Send CTS
9	Ring Indicator RI

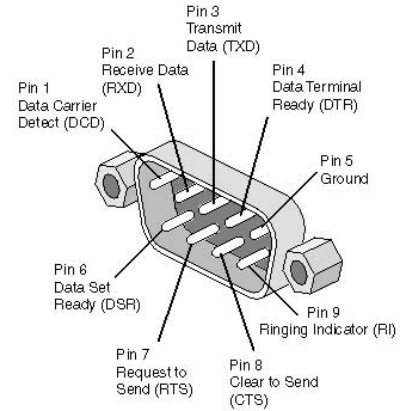


2) USB-A type: USB signal input and pin assignment

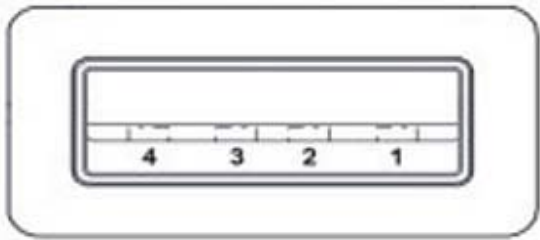

1. VCC
2. DATA-(DM)
3. DATA+(DP)
4. GND


Product Dimension and Connection Diagram

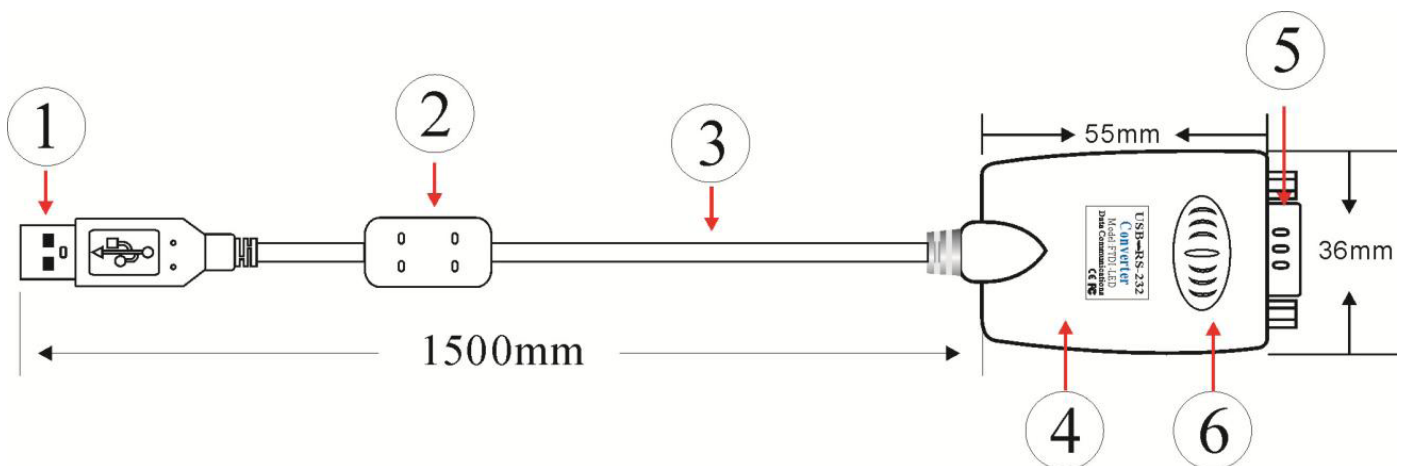


1. Standard USB A-type male connector
2. Filter magnetic ring
3. Transparent and shielded standard 2.0 communication line
4. Fine shell (blue)
5. Standard DB9 male connector
6. MCU adopts the product of the British FTDI company

USB to RS-232 Communication

1. DCD 2, RXD 3, TXD 4, DTR 5, GND 6, DSR 7, RTS 8, CTS 9, RI

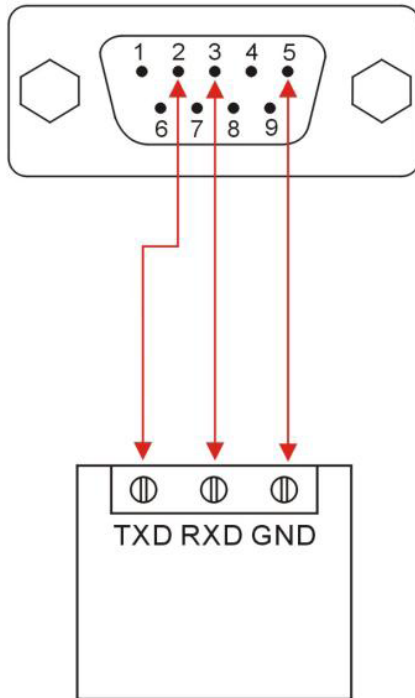

RS-232 Device

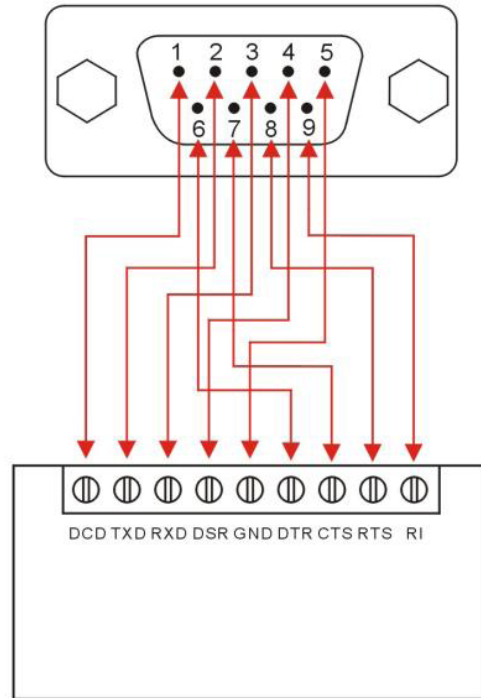

RS-232 Device

Faults and Trouble-Shooting

1. Data Communication Failure
 - a. Check the USB cable connection
 - b. Make sure that the RS-232 output interface connection is correct
 - c. Check the power supply
 - d. Check the wire terminal connection
 - e. Check receive indicator and see if it flashes
 - f. Check send indicator and see if it flashes
2. Data missing or incorrect
 - a. Check to see whether the data rate and format at both ends of the communication equipment is consistent.

